


Chandelier Adjustable Heavy Duty Stand Installation Manual

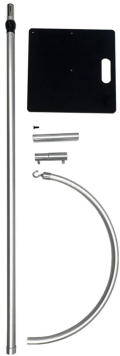

Product Parts

- Base x1pcs
- Base Pin & Screw x1pcs
- Upright 6-10ft x1pcs
- Chandelier hanger : 3ft x1pcs
- Coupler x1pcs

Step 1: Connect the Base to the Connecting Shaft

Place the pin on top of the base and tighten the screw from the bottom by turning the screw clockwise. After tightening the screw, the pin should be firmly attached to the base. **The base has a total of three holes. Always use edge corner pin location**



- Place the base on a flat and stable surface.
- Insert the connecting shaft into the center socket of the base and ensure it is firmly secured.

Step 2: Connect the Upright to the Semicircular Frame

- Take the upright and the semicircular frame.
- Align the ends of the semicircular frame with the designated connectors on the top of the upright
- Secure them together firmly.



Step 3: Insert the Upright into the Base



- Carefully lift the assembled upright and semicircular frame.
- Insert the bottom end of the upright into the connecting shaft that is already attached to the base.
- Ensure it is fully inserted and sits straight.

Step 4: Adjust the Height



- Loosen the height adjustment mechanism (e.g., a locking pin or twist lock) on the upright.
- Extend or retract the upright to your desired height (within the 6ft -10ft range).
- Once the desired height is reached, firmly tighten the mechanism to secure the frame in place.

Step 5: Final Assembly



Notes

- Ensure all connections are secure before use.
- Do not exceed the maximum recommended height.
- Avoid placing the frame on uneven surfaces.
- The base has a total of three holes.
- Always use edge corner pin location

The maximum weight capacity of the Chandelier Adjustable Heavy Duty Stand is 4-6kg.